
ZTE

MF269 Let's go

Getting started with your device.


1. Prepare

- A set of installed ODU
- A network cable
- View the label on your device to get the default information. The following figure is for your reference only.

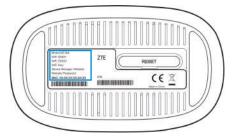


2. Connect Your Device to the POE Adapter

Connect the WAN/LAN1 port and the LAN-IN network port on the POE adapter with a network cable and make sure the POE adapter has connected to the ODU already.

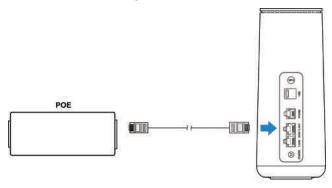

3. Power on Your Device

Connect the power adapter to power on your device.

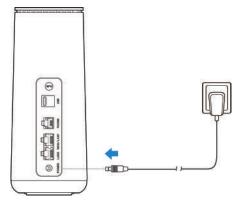


4. Access the Internet

Using Wi-Fi: Get the default WLAN SSID and WLAN key (password)
 on the label and connect to the Wi-Fi network with your mobile
 device and then access the Internet.



 Using network cable (RJ45): Connect with the computer via port LAN2 and access the Internet.

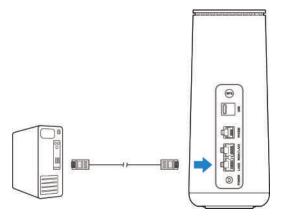

5. Change Your Device Settings

You can change the device settings by logging in to the configuration web page.

 View the label on your device to get the default Device Manager Website IP address and Website Password.




- Launch the Internet browser and enter the Device Manager Website IP address in the address bar.
- 3. Input the Website Password and then click Login.
- After the configuration web page is opened, you can change the Wi-Fi SSID, password or other settings.

WPS Function

Your device supports the WPS function. You can use this function to connect a client to your device.

- 1. Press the **WPS** button on your device to activate the WPS function.
- 2. Enable the WPS function on your client.
- Follow the system prompts on your client to establish the connection.

Indicator Lights and Interfaces

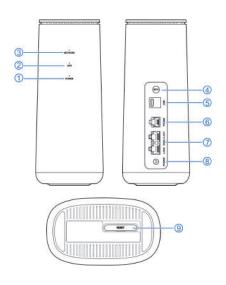

1. POWER		On: Power is on and external power supply is
	POWER	working normally.
	Off: Power is off.	
		White on: Wi-Fi works normally.
2. WIFI	WIFI	White blinking: WPS is activating.
		Off: Wi-Fi is off.
		White solid: Your device is connected to the
		Internet.
3.	NETWORK	Red solid: Your device isn't connected to the
		Internet.
		Off: The network cable isn't connected.
4.	WPS key	Press activate the WPS function.
5.	USB port	Support shared storage.
6.	PHONE port	This port is disabled and cannot be used.
		WAN/LAN1 port: Connect to WAN via a network
7 . LA	I ANI manta	cable.
	LAN ports	LAN2 port: Connect to a PC via a network
		cable.
8.	Power port	Connect to the power adapter.
9.	Reset hole	Press and hold for about 3 seconds to restore
J.	Reset 11016	your device to the factory settings.

Troubleshooting

Internet Related Problems

Symptoms	P	Possible Problems / Solutions			
	•	Please check your configuration settings.			
I cannot access the	•	Please wait 1~ 2 minutes for the device to			
Internet at all.		initialize.			
	•	Check your network indicators.			
	•	Enter the correct IP address. You can view			
I cannot visit the		the label on your device to get the default IP			
configuration web		address.			
page.	•	Only use one network adapter in your PC.			
	•	Do not use any proxy server.			
	•	Make sure the Wi-Fi function is active.			
	•	Refresh network list and select the correct			
I cannot establish		SSID.			
the Wi-Fi connection •		Check the IP address to make sure your client			
between my device		can obtain an IP address automatically in the			
and the client.		Internet protocol (TCP/IP) properties.			
	•	Type the correct network key (Wi-Fi password)			
		when you connect to the device.			

Others

Symptoms	P	ossible Problems / Solutions
	•	For the default Wi-Fi connection password and
		the default password of the CPE web page,
Problems with the		please check the label on the device.
passwords	•	If you have changed the passwords and forgot
		them, you need to restore the device to the
		factory default settings.

Getting More Help

If you experience some troubles with your Internet for home service, you can get help by calling Telenor Customer Service at +35989123.

LEGAL INFORMATION

Copyright © 2021 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Disclaimer

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Other trademarks and trade names are those of their respective owners.

Other trademarks and trade names are those of their respective owners

Version No.: R1.1

Warning and Notice

Safety Precautions

- Some electronic devices may be susceptible to electromagnetic interference. Locate the device away from TV set, radio and other electronic equipment to avoid electromagnetic interference.
- The device may interfere with medical devices like hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using it.
- Please keep yourself at least 20 centimeters away from your device.
- Do not use your device in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.
- Please use original accessories or accessories that are authorized by ZTE. Unauthorized accessories may affect the device performance, damage the device or cause danger to you.
- Do not attempt to dismantle the device. There are no userserviceable parts.
- Do not allow the device or accessories to come into contact with liquid or moisture at any time. Do not immerse the device in any liquid.

- Do not place objects on top of the device. This may lead to overheating of the device.
- The device must be placed in a well-ventilated environment for use.
- Do not expose the device to direct sunlight or store it in hot areas.
 High temperature can shorten the life of electronic devices.
- Do not allow children to play with the device or power adapter.
- The device is for indoor use only. Do not use the device outside.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Cleaning and Maintaining

- Use an antistatic cloth to clean the device. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your device before you clean it.
- Use the device within the temperature range of -20°C ~ +55°C, and the storage temperature range is - 40°C ~ +70°C. The humidity range is 5%~95%.
- Do not use your device during a thunderstorm. Remove the power adapter from the wall socket.

Limited Warranty

This warranty does not apply to defects or errors in the product caused by:

- i. Reasonable abrasion.
- End users' failure to follow ZTE's installation, operation or maintenance instructions or procedures.
- End users' mishandling, misuse, negligence, or improper installation, disassembly, storage, servicing or operation of the product.
- Modifications or repairs not provided by ZTE or a ZTE-certified individual.
- Power failures, surges, fire, flood, accidents, and actions of third parties or other events outside ZTE's reasonable control.
- Usage of third-party products or usage in conjunction with thirdparty products if such defects are due to the combined usage.
- Any other cause beyond the range of normal usage intended for the product.

End users have no right to reject or return the product, or receive a refund for the product from ZTE under the above-mentioned situations. This warranty is end users' sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties.

expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, no matter whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

RF Exposure

This equipment complies with CE radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Specification

This radio equipment operates with the following frequency bands and maximum radio-frequency power.



All ZTE products are compliant with these power limits required by the European Union. Frequency bands supported by the product vary by model.

802.11 a/b/g/n/ac/ax: 2.4GHz Band ≤ 21 dBm

5 GHz Band I/II/III/IV/V ≤ 20 dBm

CE Caution (Proper Use)

As described in this guide, your device can be used only in the right location. If possible, please do not touch the antenna area on your device.

Disposal of Your Old Appliance



- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

EU DECLARATION OF CONFORMITY



Hereby, ZTE Corporation declares that the radio equipment type ZTE MF269 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

https://certification.ztedevices.com

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	ΙE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK(NI)

ZTE CORPORATION

NO. 55, Hi-tech Road South, Shenzhen, P.R.China

Postcode: 518057